

# BDC-COMM Application

## User's Guide



---

# Copyright

Copyright © 2009–2012 Texas Instruments, Inc. All rights reserved. Stellaris and StellarisWare are registered trademarks of Texas Instruments. ARM and Thumb are registered trademarks, and Cortex is a trademark of ARM Limited. Other names and brands may be claimed as the property of others.

Texas Instruments  
108 Wild Basin, Suite 350  
Austin, TX 78746  
<http://www.ti.com/stellaris>



# Table of Contents

|                                             |    |
|---------------------------------------------|----|
| Introduction .....                          | 5  |
| System Requirements.....                    | 5  |
| Hardware Requirements .....                 | 5  |
| Building the Interface Cable .....          | 5  |
| BDC-COMM Basics .....                       | 5  |
| Running BDC-COMM in GUI Mode .....          | 5  |
| Running BDC-COMM in Command Line Mode ..... | 5  |
| Using the GUI .....                         | 6  |
| Using the Command Line .....                | 13 |
| Commands.....                               | 13 |
| ID Command.....                             | 13 |
| Heartbeat Command.....                      | 13 |
| Voltage Control Mode .....                  | 14 |
| <i>Voltage Mode Enable</i> .....            | 14 |
| <i>Voltage Mode Disable</i> .....           | 14 |
| <i>Voltage Mode Set (Value)</i> .....       | 14 |
| <i>Voltage Mode Set Ramp</i> .....          | 14 |
| Current Control Mode .....                  | 14 |
| <i>Current Mode Enable</i> .....            | 15 |
| <i>Current Mode Disable</i> .....           | 15 |
| <i>Current Mode Set (Value)</i> .....       | 15 |
| <i>Current Mode P, I and D</i> .....        | 15 |
| Speed Control Mode .....                    | 15 |
| <i>Speed Mode Enable</i> .....              | 15 |
| <i>Speed Mode Disable</i> .....             | 15 |
| <i>Speed Mode Set (Value)</i> .....         | 16 |
| <i>Speed Mode P, I and D</i> .....          | 16 |
| <i>Speed Mode Reference</i> .....           | 16 |
| Position Control Mode.....                  | 16 |
| <i>Position Mode Enable</i> .....           | 16 |
| <i>Position Mode Disable</i> .....          | 16 |
| <i>Position Mode Set (Value)</i> .....      | 17 |
| <i>Position Mode P, I and D</i> .....       | 17 |
| <i>Position Mode Reference</i> .....        | 17 |
| Board Status .....                          | 17 |
| <i>Vout Status</i> .....                    | 17 |
| <i>Vbus Status</i> .....                    | 17 |
| <i>Fault Status</i> .....                   | 18 |
| <i>Current Status</i> .....                 | 18 |
| <i>Temperature Status</i> .....             | 18 |
| <i>Position Status</i> .....                | 18 |
| <i>Speed Status</i> .....                   | 19 |
| <i>Limit Status</i> .....                   | 19 |
| <i>Power Status</i> .....                   | 19 |
| <i>Control Mode Status</i> .....            | 20 |
| <i>Vout Status Percentage</i> .....         | 20 |
| <i>Sticky Fault Status</i> .....            | 20 |
| <i>Fault Count Status</i> .....             | 20 |

|                                  |    |
|----------------------------------|----|
| Board Configuration .....        | 21 |
| <i>Encoder Lines</i> .....       | 21 |
| <i>Potentiometer Turns</i> ..... | 21 |
| <i>Braking</i> .....             | 21 |
| <i>Limit Switches</i> .....      | 21 |
| <i>Forward Soft Limit</i> .....  | 21 |
| <i>Reverse Soft Limit</i> .....  | 22 |
| <i>Maximum Vout</i> .....        | 22 |
| <i>Fault Time</i> .....          | 22 |
| System Commands.....             | 22 |
| <i>Halt</i> .....                | 22 |
| <i>Resume</i> .....              | 22 |
| <i>Reset</i> .....               | 23 |
| <i>Enumerate</i> .....           | 23 |
| <i>Assign ID</i> .....           | 23 |
| <i>Query</i> .....               | 23 |
| <i>Synchronous Update</i> .....  | 23 |
| <i>Version</i> .....             | 23 |
| <i>Hardware Version</i> .....    | 24 |
| Periodic Status.....             | 24 |
| <i>Get Interval</i> .....        | 24 |
| <i>Get Configuration</i> .....   | 24 |
| <i>Set Interval</i> .....        | 25 |
| <i>Set Configuration</i> .....   | 25 |
| Firmware Update .....            | 26 |
| Wait for Bootloader .....        | 26 |

## Introduction

The BDC-COMM application allows you to control and monitor the MDL-BDC24 using either command line or graphical user interface (GUI). Using your computer's COM port and a special cable, the application interfaces to the MDL-BDC24 using simple serial/UART communication. With an MDL-BDC24 as the main interface, the application allows connectivity to a network of MDL-BDC24 and legacy MDL-BDC devices that are connected using the built-in CAN interface of the boards.

## System Requirements

BDC-COMM is built using the Fast Light Tool Kit (FLTK) cross-platform GUI development software allowing the application to run on both Windows and Linux systems.

**NOTE:** Because the BDC-COMM application sends out a periodic heartbeat to keep the board alive, slower systems may have trouble keeping up. The heartbeat is sent out every 50 ms, so if you have an older or slow system, the heartbeats may not always get out in time. Missing a heartbeat makes the LED on the MDL-BDC24/MDL-BDC flash instead of remain solid. It also causes the motor to stop spinning if it is currently running.

## Hardware Requirements

To use the application, connect the MDL-BDC24 to a PC. The MDL-BDC24 must be the first board in a chain of motor controllers. The legacy MDL-BDC does not have the hardware support needed to communicate with the PC over the serial/UART link.

Spotting the difference between an MDL-BDC24 and an MDL-BDC is easy. The newer MDL-BDC24 comes in black plastic with a red Texas Instruments logo on the fan grill. The legacy MDL-BDC comes in gray plastic with an orange Luminary Micro logo on the fan grill.

## Building the Interface Cable

See the *MDL-BDC24 Getting Started Guide* for information about building the required interface cable.

## BDC-COMM Basics

The BDC-COMM application is capable of running in both GUI mode (see "Running BDC-COMM in GUI Mode" on page 5) and command line mode (see "Running BDC-COMM in Command Line Mode" on page 5).

## Running BDC-COMM in GUI Mode

To launch the application in GUI mode, simply double-click on the `bdc-comm.exe` file. When running in Windows, a console window opens briefly before the GUI appears, which is typical behavior for Windows executables. The console window disappears on its own.

Launch the GUI from the command line by typing "`bdc-comm.exe`" in the console window. No additional input arguments are needed. For more details, see "Using the GUI" on page 6.

## Running BDC-COMM in Command Line Mode

The BDC-COMM application defaults to command line mode when input arguments are passed to it when launching from the console window. For example, typing:

```
> bdc-comm.exe -c 1
```

(which tells the application to open using COM1), launches the application in command line mode. When the application is running, your console appears with a hash (# sign). For example:

```
> bdc-comm.exe -c 1  
#
```

When the hash symbol appears, you can begin typing commands. If you need a list of the available commands, type "help". For more details, see "Using the Command Line" on page 13.

## Using the GUI

Figure 1-1 shows the main GUI window. See Figure 1-2, "Configuration Tab" on page 7, Figure 1-3, "Periodic Status Tab" on page 8, and Figure 1-4, "System Tab" on page 9 to see the Configuration, Periodic Status, and System tabs. More details on the interface are provided in Table 1-1 on page 10. When the application launches, it tries to open a connection to the MDL-BDC24 through the first system COM port. If a COM port is unavailable or not connected to the board, it does not show any real-time status information. If no board is connected to the application, the status indicator in the application menu bar shows "Disconnected" and the Board ID drop-down lists "-" as the current board ID.

Figure 1-1. BDC-COMM Main GUI Window

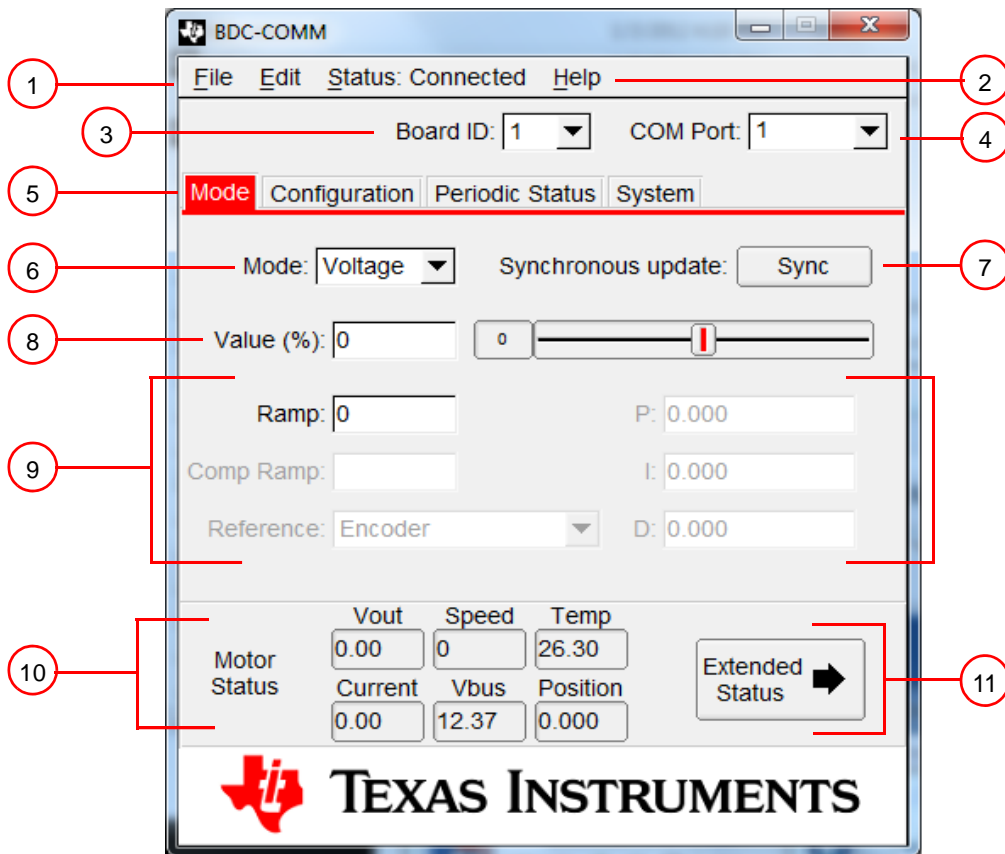


Figure 1-2. Configuration Tab

12

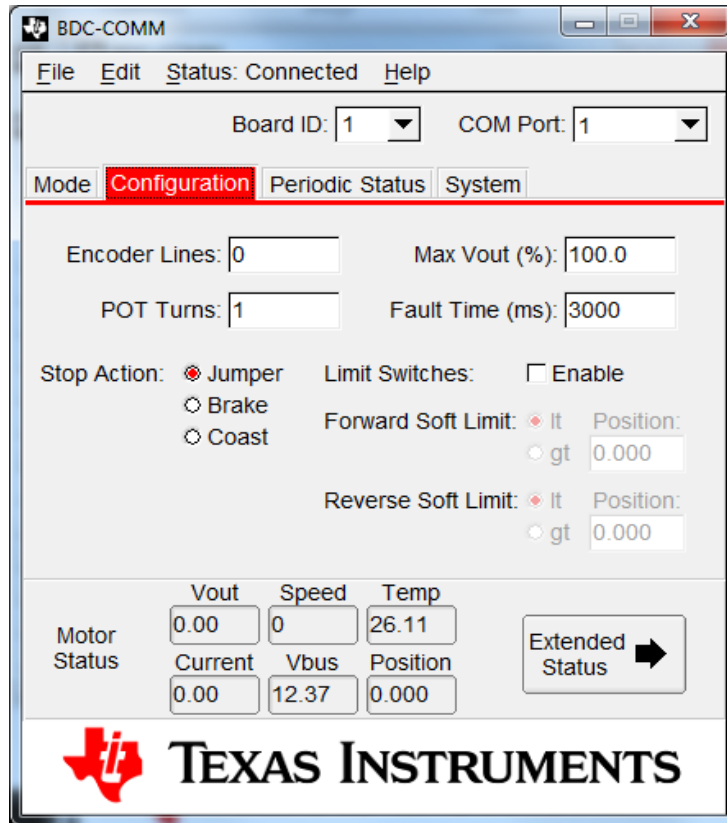


Figure 1-3. Periodic Status Tab

13

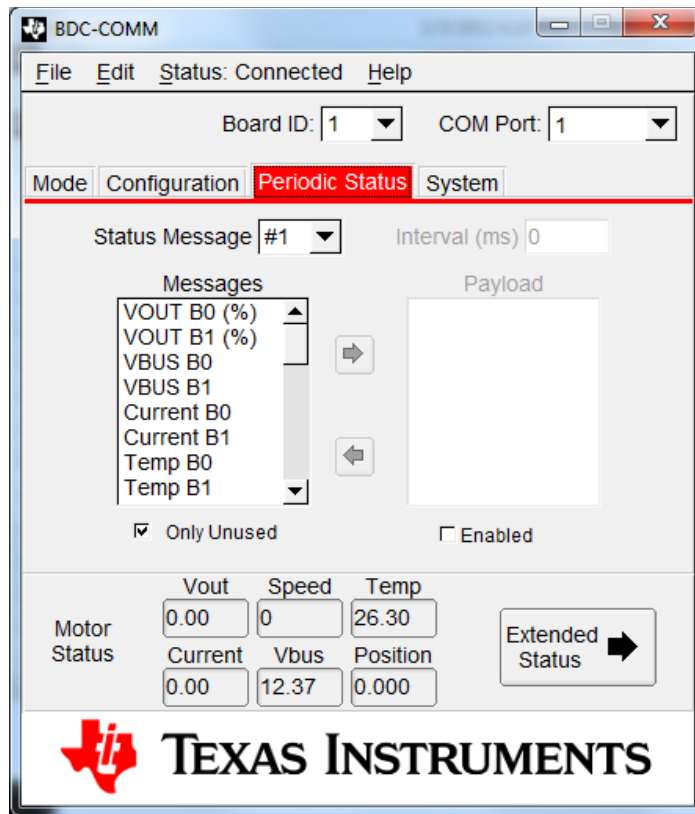
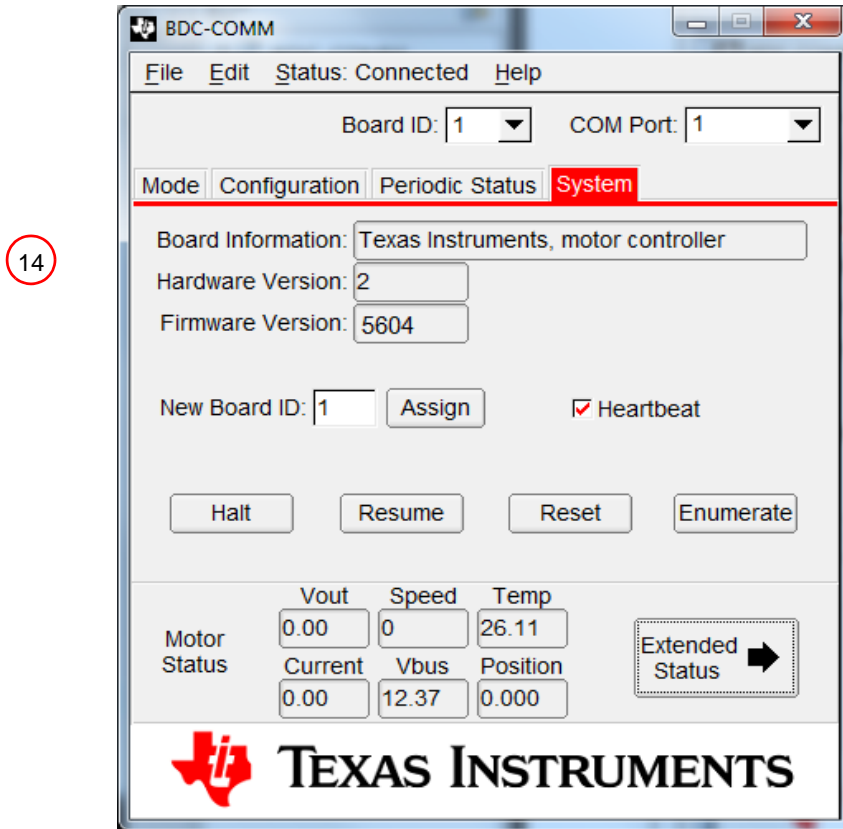


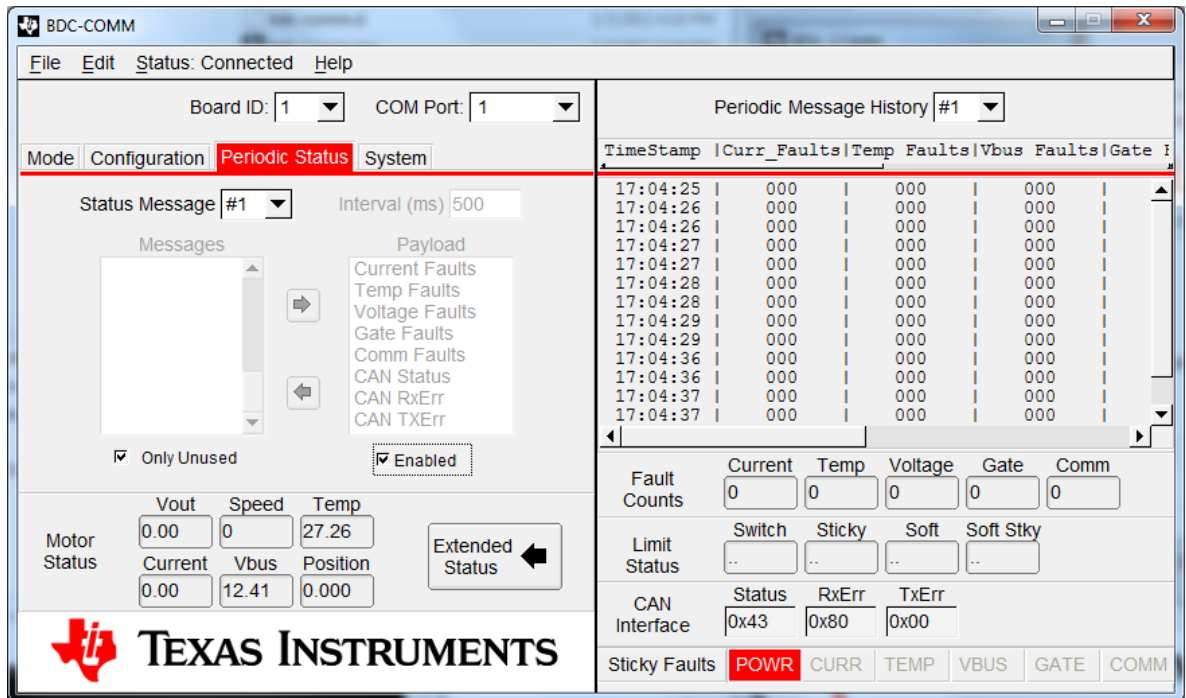


Figure 1-4. System Tab



14

Figure 1-5. Extended Status Tab



15

Table 1-1. Description of GUI Window Controls

| Item Number             | Name                                                                                                                                                                                                   | Description                                                                                                                                                                                                                                                                                                                               |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                       | <b>Menu Bar</b>                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                           |
|                         | <b>File Menu</b>                                                                                                                                                                                       | <b>Update Firmware</b><br>Displays firmware update dialog window. Firmware update requires a binary file (*.bin). Invoke this option using the keyboard shortcut "Ctrl+U".                                                                                                                                                                |
|                         |                                                                                                                                                                                                        | <b>Exit</b><br>Exits/Quits the application. Keyboard shortcut "Ctrl+Q".                                                                                                                                                                                                                                                                   |
|                         | <b>Edit Menu</b>                                                                                                                                                                                       | <b>Clear History</b><br>Clears the currently displayed Periodic Status History data. Keyboard shortcut "Ctrl-L".                                                                                                                                                                                                                          |
|                         |                                                                                                                                                                                                        | <b>Copy History</b><br>Copies the currently displayed Periodic Status History data to the clipboard. Keyboard shortcut "Ctrl-C".                                                                                                                                                                                                          |
| <b>Status Indicator</b> | <b>Connect/Disconnect</b><br>The text of the status indicator shows the current connection status. Clicking this option drops down a connect or disconnect menu item, depending on the current status. |                                                                                                                                                                                                                                                                                                                                           |
| 2                       | <b>Help</b>                                                                                                                                                                                            | Displays help for the BDC-COMM application.                                                                                                                                                                                                                                                                                               |
| 3                       | <b>Board ID</b>                                                                                                                                                                                        | Displays the current active board. Selecting a different board from the drop-down list changes the current active board.                                                                                                                                                                                                                  |
| 4                       | <b>COM Port</b>                                                                                                                                                                                        | Displays the current active COM port. Selecting a different COM port from the drop-down list disconnects the active COM port connection and attempts to open up a connection to the new COM port. The Status Indicator (item number 2) is updated if a board is found.                                                                    |
| 5                       | <b>Command Grouping Tabs</b>                                                                                                                                                                           | The commands are grouped into operation types: Mode (items related to Current Operating mode), Configuration (items related to the configuration of the control system), and System (board information, board ID assignment, basic system level commands).                                                                                |
| 6                       | <b>Mode</b>                                                                                                                                                                                            | The Mode drop-down controls the active control mode used for the motor controller. The board defaults to Voltage Control mode out of reset. Changing the control mode enables or disables options (item number 9) that are relevant to the selected mode.                                                                                 |
| 7                       | <b>Synchronous Update</b>                                                                                                                                                                              | When the 'Sync' button is clicked, it turns red to indicate that Synchronous Update mode is enabled. Synchronous Update mode allows you to change the values in the Mode tab without having them apply immediately. Clicking the 'Sync' button a second time applies the newly selected values and disables Synchronous Update Mode.      |
| 8                       | <b>Value</b>                                                                                                                                                                                           | This field sets the value for the active control mode. For example, voltage in Voltage Mode, current in Current Mode. The value can be set in the box or using the slider control, and setting one automatically updates the other. You can also "click and drag" the value box to set the value instead of manually typing in the value. |
| 9                       | <b>Control Mode Options</b>                                                                                                                                                                            | The control mode options change with each control mode. The options that are not applicable to the active mode are grayed out. If the control mode is changed and an option becomes active, the target is polled to get the current value on the board.                                                                                   |

Table 1-1. Description of GUI Window Controls (Continued)

| Item Number | Name                       | Description                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10          | <b>Real-Time Status</b>    | These boxes contain the real-time status information of the active board. Some fields are not updated in every control mode, so they may not change. The status information is updated every 500 ms.                                                                                                                                                                                                      |
| 11          | <b>Extended Status</b>     | Expands or shrinks the window to show or hide additional system status information.                                                                                                                                                                                                                                                                                                                       |
| 12          | <b>Configuration Tab</b>   |                                                                                                                                                                                                                                                                                                                                                                                                           |
|             | <b>Encoder Lines</b>       | Selects the number of encoder lines, if present. This option only applies when the 'Reference' option in the Mode tab is set to 'Encoder'.                                                                                                                                                                                                                                                                |
|             | <b>POT Turns</b>           | Selects the number of POT turns, if present. This option only applies when the 'Reference' option in the Mode Tab is set to 'Potentiometer'.                                                                                                                                                                                                                                                              |
|             | <b>Max Vout</b>            | Changes the maximum output voltage that the motor can operate.                                                                                                                                                                                                                                                                                                                                            |
|             | <b>Fault Time</b>          | Indicates the amount of time that the fault indicator is active.                                                                                                                                                                                                                                                                                                                                          |
|             | <b>Stop Action</b>         | Selects what to do when the motor is stopped.<br>Jumper – The jumper on the board indicates the action.<br>Brake – The motor stops immediately.<br>Coast – the motor coasts to a stop, and no braking is applied.                                                                                                                                                                                         |
|             | <b>Limit Switches</b>      | Disables or enables the use of the hardware (jumper) limit switches using the checkbox.<br>Forward Software Limit – If the jumpers are not used, sets the limit position and whether it is less than (lt) or greater than (gt) the set position.<br>Reverse Software Limit – If the jumpers are not used, sets the limit position and whether it is less than (lt) or greater than (gt) the set position. |
| 13          | <b>Periodic Status Tab</b> |                                                                                                                                                                                                                                                                                                                                                                                                           |
|             | <b>Status Message</b>      | Selects the Periodic Status Message to display.                                                                                                                                                                                                                                                                                                                                                           |
|             | <b>Interval</b>            | Sets the delivery interval in milliseconds for the selected periodic status. This field is inactive until a message is added to the payload.                                                                                                                                                                                                                                                              |
|             | <b>Messages</b>            | This listing includes the individual status messages available for periodic updates. The messages are available in 8-bit chunks.                                                                                                                                                                                                                                                                          |
|             | <b>Payload</b>             | This list shows the active status messages included in the selected periodic status. The payload allows for a total of eight 8-bit data chunks.                                                                                                                                                                                                                                                           |
|             | <b>Only Unused</b>         | This checkbox indicates that the Messages list should be filtered to only show messages not already active in a periodic message.                                                                                                                                                                                                                                                                         |
|             | <b>Enabled</b>             | This checkbox starts or stops the periodic message. The checkbox is only available once a message has been added to the payload and the interval has been set.                                                                                                                                                                                                                                            |

Table 1-1. Description of GUI Window Controls (Continued)

| Item Number | Name                              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 14          | <b>System Tab</b>                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|             | <b>Board/Hardware Information</b> | Shows information about the motor controller, including details of the hardware and firmware version.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|             | <b>Board ID Assignment</b>        | Changes the ID of the active board. Once the new ID is chosen and entered in the box, click the 'Assign' button. A 5-second countdown begins, during which time you must press the user button on the motor controller. If you press the button, the board attempts to blink the LED X times, where X is the new ID. Note that after 5 seconds, the heartbeat resumes and depending on the length of the ID, it may be cut off by the heartbeat.<br><br>If you miss the 5-second window to press the button on the MDL-BDC24, any device on the network that had the new ID already assigned has its ID erased. This condition appears as a fast blinking pattern on the LED. In this state, you can still assign an ID to the board. |
|             | <b>Heartbeat</b>                  | Enables/disables the heartbeat.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|             | <b>Halt</b>                       | Halts the system. If the system is halted, all motors are put into the neutral state and continue to drive until the Resume command has been issued.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|             | <b>Resume</b>                     | Enables the system from a halt state.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|             | <b>Reset</b>                      | Resets the system over the network.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|             | <b>Enumerate</b>                  | Re-enumerates the network.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 15          | <b>Extended Status Expansion</b>  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|             | <b>Periodic Message History</b>   | Changes the periodic message history display to the specified message number. The area below this drop-down menu shows the legend and the data history.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|             | <b>Fault Counts</b>               | These boxes contain the latest fault counters reported from the board. The values can range from 0-255.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|             | <b>Limit Status</b>               | These boxes show the various Limit status indicators received from the board. "Sticky" indicators are preserved until cleared.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|             | <b>CAN Interface</b>              | These boxes show the status register data for the CAN interface controller on the board.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|             | <b>Sticky Faults</b>              | These boxes display "sticky" indicators for fault conditions.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

## Using the Command Line

The BDC-COMM application can also be run from the command line, as described in “Running BDC-COMM in Command Line Mode” on page 5. Users who are more comfortable with a command line utility can use the BDC-COMM application without the GUI.

### Commands

The commands that BDC-COMM provides are identical to the command list described in the CAN Interface section of the *RDK-BDC Software User's Guide* (document name SW-RDK-BDC-UG-xxxx.pdf). For a more thorough description of each command, see that document.

Type “help,” “h,” or “?” at any time on the command line to view the full list of available commands. This displays the full list of commands along with a brief description of what the commands do. For example:

```
> BCD-comm.exe -c 1
# help
help- display a list of commands
h- alias for help
?- alias for help
id- set the target ID
heartbeat- start/stop the heartbeat
volt- voltage control mode commands
cur- current control mode commands
speed- speed control mode commands
pos- position control mode commands
stat- status commands
config- configuration commands
system- system commands
pstat- periodic status commands
update- update the firmware
boot- wait for boot loader to request update
exit- exit the program
quit- alias for exit
q- alias for exit
#
```

### ID Command

Sets a new active board ID.

**Format:**

```
# id <num>
```

Where <num> is any value between 1 and 63.

### Heartbeat Command

Enables or disables the heartbeat.

**Format:**

```
# heartbeat [on|off]
```

## Voltage Control Mode

Enable and configure the Voltage Control mode by typing “volt” on the command line. This displays a list of the valid options:

```
# volt
volt [en|dis|set|ramp]
```

### Voltage Mode Enable

Enable voltage mode by using the “en” sub-command. This command allows the other voltage related commands to control the voltage applied to the output of the MDL-BDC24.

**Format:**

```
# volt [en]
```

### Voltage Mode Disable

Disable voltage mode by using the “dis” sub-command. Issuing this command disables all other voltage commands from affecting the output voltage of the MDL-BDC24.

**Format:**

```
# volt dis
```

### Voltage Mode Set (Value)

Sets the voltage when Voltage Control mode is enabled. If Voltage Control mode is not enabled, using this command does not affect the output voltage on the MDL-BDC24.

**Format:**

```
# volt [set] <val> <sync_group>
```

Where <val> is a 16-bit 8.8 signed fixed-point number. The optional 8-bit < sync\_group > field specifies the group number for a synchronous update.

### Voltage Mode Set Ramp

Sets the ramp rate over an extended period of time.

**Format:**

```
# volt ramp <val>
```

Where <val> is a 16-bit 8.8 unsigned fixed point number that indicates the maximum rate of change for the voltage.

## Current Control Mode

Enable and configure the Current Control mode by typing “cur” on the command line. This displays a list of the valid options:

```
# cur
cur [en|dis|set|p|i|d]
```

**Current Mode Enable**

Enable current mode by using the “en” sub-command. This command allows the other current related commands to control the amount of current applied to the output of the MDL-BDC24.

**Format:**

```
# cur [en]
```

**Current Mode Disable**

Disable current control mode by using the “dis” sub-command. Issuing this command disables all other current control commands from affecting the output of the MDL-BDC24.

**Format:**

```
# cur dis
```

**Current Mode Set (Value)**

Sets the current when Current Control mode is enabled. If Current Control mode is not enabled, using this command does not affect the output voltage on the MDL-BDC24.

**Format:**

```
# cur [set] <val> <sync_group>
```

Where <val> is a 32-bit 16.16 signed fixed point number. The optional 8-bit < sync\_group > field specifies the group number for a synchronous update.

**Current Mode P, I and D**

Sets the P (proportional), I (integral), and D (differential) constants for the PID control algorithm.

**Format:**

```
# current [p|i|d] <val>
```

Where <val> is a 32-bit 16.16 signed fixed point number.

**Speed Control Mode**

Enable and configure the Speed Control mode by typing “speed” on the command line. This displays a list of the valid options:

```
# speed  
speed [en|dis|set|p|i|d|ref]
```

**Speed Mode Enable**

Enable speed mode by using the “en” sub-command. This command allows the other speed control related commands to affect the speed of the motor attached to the MDL-BDC24.

**Format:**

```
# speed [en]
```

**Speed Mode Disable**

Disable speed control mode by using the “dis” sub-command. Issuing this command disables all other speed control commands from affecting the output of the MDL-BDC24.

**Format:**

```
# speed dis
```

**Speed Mode Set (Value)**

Sets the speed when Speed Control mode is enabled. If Speed Control mode is not enabled, using this command does not affect the output voltage on the MDL-BDC24.

**Format:**

```
# speed [set] <val> <sync_group>
```

Where <val> is a 32-bit 16.16 signed fixed point number. The optional 8-bit <sync\_group> field specifies the group number for a synchronous update.

**Speed Mode P, I and D**

Sets the P (proportional), I (integral), and D (differential) constants for the PID control algorithm.

**Format:**

```
# speed [p|i|d] <val>
```

Where <val> is a 32-bit 16.16 signed fixed point number.

**Speed Mode Reference**

Sets the reference used for measuring the current speed of the motor. Currently, the only supported speed reference is an encoder.

**Format:**

```
# speed ref <val>
```

Where <val> is a 8-bit unsigned number.

## Position Control Mode

Enable and configure the Position Control mode by typing “pos” on the command line. This displays a list of the valid options:

```
# pos  
pos [en|dis|set|p|i|d|ref]
```

**Position Mode Enable**

Enable [osition mode by using the “en” sub-command. This command allows the other position control related commands to affect the position of the motor attached to the MDL-BDC24.

**Format:**

```
# pos [en]
```

**Position Mode Disable**

Disable position control mode by using the “dis” sub-command. Issuing this command disables all other position control commands from affecting the output of the MDL-BDC24.

**Format:**

```
# pos dis
```



**Position Mode Set (Value)**

Sets the position when position control mode is enabled. If position control mode is not enabled, using this command does not affect the output voltage on the MDL-BDC24.

**Format:**

```
# pos [set] <val> <sync_group>
```

Where <val> is the position represented as a 32-bit value. The optional 8-bit <sync\_group> field specifies the group number for a synchronous update.

**Position Mode P, I and D**

Sets the P (proportional), I (integral), and D (differential) constants for the PID control algorithm.

**Format:**

```
# pos [p|i|d] <val>
```

Where <val> is a 32-bit 16.16 signed fixed point number.

**Position Mode Reference**

Sets the reference used for measuring the current speed of the motor. Currently, the only supported speed reference is an encoder.

**Format:**

```
# pos ref <val>
```

Where <val> is a 8-bit unsigned number.

**Board Status**

Check the current status of the board by typing "stat" on the command line. This displays a list of the valid options:

```
# stat
stat
[vout|vbus|fault|cur|temp|pos|speed|limit|power|cmode|vout2|stkyfault|
faultcnts]
```

**Vout Status**

Obtains the current voltage percentage being applied to the motor.

**Format:**

```
# stat vout
```

**Return:**

```
stat vout (board_id) = <val>
```

Where board\_id is the current selected board, and <val> is the most recent value obtained from the motor controller.

**Vbus Status**

Obtains the current bus voltage.

**Format:**

```
# stat vbus
```

**Return:**

```
stat vbus (board_id) = <val> (real_value)
```

Where board\_id is the current selected board, and <val> is the most recent value obtained from the motor controller. The real value of the bus voltage is also displayed in parenthesis (for example, 12.15).

**Fault Status**

Obtains the current fault status.

**Format:**

```
# stat fault
```

**Return:**

```
stat fault (board_id) = <val>
```

Where board\_id is the current selected board, and <val> is the most recent fault value obtained from the motor controller.

**Current Status**

Obtains the most recent current value (Current mode).

**Format:**

```
# stat cur
```

**Return:**

```
stat cur (board_id) = <val> (real_value)
```

Where board\_id is the current selected board, and <val> is the most recent value obtained from the motor controller. The real value of the current is also displayed in parenthesis (for example, 1.25).

**Temperature Status**

Obtains the current temperature reading.

**Format:**

```
# stat temp
```

**Return:**

```
stat temp (board_id) = <val> (real_value)
```

Where board\_id is the current selected board, and <val> is the most recent value obtained from the motor controller. The real value of the temperature is also displayed in parenthesis (for example, 25.65).

**Position Status**

Obtains the current position (Position mode).

**Format:**

```
# stat pos
```

**Return:**

```
stat pos (board_id) = <val> (real_value)
```

Where board\_id is the current selected board, and <val> is the most recent value obtained from the motor controller. The real value of the position is also displayed in parenthesis (for example, 12.15).

**Speed Status**

Obtains the current speed (Speed mode).

**Format:**

```
# stat speed
```

**Return:**

```
stat speed (board_id) = <val> (real_value)
```

Where board\_id is the current selected board, and <val> is the most recent value obtained from the motor controller. The real value of the speed is also displayed in parenthesis (for example, 12.15).

**Limit Status**

Obtains the values of the limit switches.

**Format:**

```
# stat limit
```

**Return:**

```
stat limit (board_id) = <info>
```

Where board\_id is the current selected board, and <info> is the fitting of the jumpers. If the forward or reverse limit switches are set, an "F" or "R" appears. Otherwise, a "." appears in that position. (for example, if forward is fitted and reverse is not, it displays "F".)

**Power Status**

Obtains the power.

**Format:**

```
# stat power
```

**Return:**

```
stat power (board_id) = <val>
```

Where board\_id is the current selected board, and <val> is the most recent value obtained from the motor controller.

### Control Mode Status

Obtains the current control mode

**Format:**

```
# stat cmode
```

**Return:**

```
Control Mode (board_id) = <mode>
```

Where board\_id is the current selected board, and <mode> is the current control mode. Possible values include: Voltage, Voltage Compensation, Current, Speed, Position, and Unknown.

### Vout Status Percentage

Obtains the current voltage being applied to the motor (percentage \* vbus).

**Format:**

```
# stat vout2
```

**Return:**

```
stat vout2 (board_id) = <val> (<val>)
```

Where board\_id is the current selected board, and <val> are the latest values obtained from the motor controller.

### Sticky Fault Status

Obtains the sticky fault status. These are read-clear.

**Format:**

```
# stat stkyfault
```

**Return:**

```
stat stkyfault (board_id) = <val>
```

Where board\_id is the current selected board, and <val> is the most recent value obtained from the motor controller.

### Fault Count Status

Obtains the current fault counters.

**Format:**

```
# stat faultcnts
```

**Return:**

```
stat fault-counts (board_id)
curr faults: <val>
temp faults: <val>
volt faults: <val>
gate faults: <val>
comm faults: <val>
cansts[7:0]: <val>
```

```
canerr[15:8]: <val>  
canerr[7:0]: <val>
```

Where board\_id is the current selected board, and the <val> fields are the most recent values obtained from the motor controller. Providing a third parameter clears the fault counter specified as a bit flag representing the counter as listed above.

## Board Configuration

Configure the board by typing “config” on the command line. This displays a list of the valid options:

```
# config  
config [lines|turns|brake|limit|fwd|rev|maxvout|faulttime]
```

### Encoder Lines

Sets the number of encoder lines (if encoder present).

**Format:**

```
# config lines <val>
```

Where <val> is the number of encoder lines, represented as a 16-bit unsigned value.

### Potentiometer Turns

Sets the number of potentiometer turns (if POT present).

**Format:**

```
# config turns <val>
```

Where <val> is the number of potentiometer turns, represented as a 16-bit unsigned value.

### Braking

Sets the braking mode for the motor.

**Format:**

```
# config brake [jumper|brake|coast]
```

Where jumper lets the jumper configuration choose, brake stops the motor immediately, and coast applies no braking.

### Limit Switches

Configures the use of limit switches (hardware versus software).

**Format:**

```
# config limit [on|off]
```

If set to “on”, the motor controller uses the hardware limit switches. If “off”, it uses software limits.

### Forward Soft Limit

Configures the use of software limit in the forward direction.

**Format:**

```
# config fwd <pos> [lt|gt]
```

Where <pos> is the software-determined position limit, represented as a 16.16 fixed point value. The "lt" and "gt" specify whether the limit is less than (lt) or greater than (gt) the value of <pos>.

### **Reverse Soft Limit**

Configures the use of software limit in the reverse direction.

**Format:**

```
# config rev <pos> [lt|gt]
```

Where <pos> is the software-determined position limit, represented as a 16.16 fixed point value. The "lt" and "gt" specify whether the limit is less than (lt) or greater than (gt) the value of <pos>.

### **Maximum Vout**

Sets the maximum output voltage.

**Format:**

```
# config maxvout <val>
```

Where <val> is the maximum output voltage specified as a 16-bit 8.8 unsigned fixed point number.

### **Fault Time**

Configures the amount of time a fault is active for.

**Format:**

```
# config faulttime <val>
```

Where <val> is the amount of time (in milliseconds) that the fault is active. This value is represented as a 16-bit unsigned value.

## **System Commands**

Perform system-level operations by typing "system" on the command line. This displays a list of the valid options:

```
# system
system [halt|resume|reset|enum|assign|query|sync|version|hwver]
```

### **Halt**

Halts the system (all boards). When halt is issued, all motor controllers stop driving the motor, go to a neutral state. All motors remain stopped until a resume or reset command has been received.

**Format:**

```
# system halt
```

### **Resume**

Resumes the system from the halted state. If the system is halted, a resume must be sent before the MDL-BDC24 allows any commands to affect the output and allows the motor to move.

**Format:**

```
# system resume
```

**Reset**

Upon receiving this message the motor controller stops driving the motor, goes to a neutral state, and resets internal settings to their boot settings.

**Format:**

```
# system reset
```

**Enumerate**

This command causes the motor controller to send out a response to indicate that device is present on the CAN network. In order to prevent all devices from responding at once, the motor controllers wait for (device number) \* 1ms after the enumerate command before responding. A list of connected devices is returned.

**Format:**

```
# system enum
```

**Assign ID**

This command causes the motor controller to enter the assignment state. Upon reception of this command with the new ID, the controller waits 5 seconds for the user push button to be pressed. Once pressed, the controller accepts the new ID and blinks the LED to indicate the new assigned value (that is, blinks 5 times for an ID of 5).

**Format:**

```
# system assign <val>
```

Where <val> is the new ID, ranging from 1 to 63. ID 1 is typically reserved for the first device in the network.

**Query**

Queries the active device for basic information. It should return some information such as "Texas Instruments Motor Controller".

**Format:**

```
# system query
```

**Synchronous Update**

Allows up to 8 groups of devices to be simultaneously updated with a single command.

**Format:**

```
# system sync <val>
```

Where <val> is a bitmask of the groups that are to be updated. It is represented as a 8-bit unsigned value.

**Version**

Requests the current version of firmware of the motor controller. The motor controller returns the value.

**Format:**

```
# system version
```

**Hardware Version**

Requests the current hardware version of the motor controller. The motor controller returns the value. A value of 1 indicates the device connected to the given ID is an MDL-BDC and a value of 2 is an MDL-BDC24.

**Format:**

```
# system hwver
```

**Periodic Status**

Perform periodic status-related operations by typing "pstat" on the command line. This displays a list of the valid options:

```
# pstat
pstat [int|cfg] <pmsg#>
```

**Get Interval**

Obtains the currently set interval for the periodic message.

**Format:**

```
# pstat int <pmsg#>
```

Where <pmsg#> is a value of 0-3 representing the periodic status message number.

**Return:**

```
pstat msgN int (board_id): <val>ms
```

Where N is the periodic message number, board\_id is the current selected board and <val> is the most recent value obtained from the motor controller.

**Get Configuration**

Obtains the currently set configuration for the periodic message.

**Format:**

```
# pstat cfg <pmsg#>
```

Where <pmsg#> is a value of 0-3 representing the periodic status message number.

**Return:**

```
pstat msgN cfg (board_id):
byte0 ID: <mnemonic> (<val>)
byte1 ID: <mnemonic> (<val>)
byte2 ID: <mnemonic> (<val>)
byte3 ID: <mnemonic> (<val>)
```



```

byte4 ID: <mnemonic> (<val>)
byte5 ID: <mnemonic> (<val>)
byte6 ID: <mnemonic> (<val>)
byte7 ID: <mnemonic> (<val>)

```

Where N is the periodic message number, board\_id is the current selected board, <mnemonic> is a text string identifier for the message type, and the <val> fields are the most recent values obtained from the motor controller.

### Set Interval

Sets the periodic message interval.

#### Format:

```
# pstat int <pmsg#> <val>
```

Where <pmsg#> is a value of 0-3 representing the periodic status message number and <val> is the interval to use for the periodic message, ranging from 0 (disabled) to 65535 milliseconds.

### Set Configuration

Sets the periodic message configuration.

#### Format:

```
# pstat cfg <pmsg#> <val> <val> <val> <val> <val> <val> <val> <val>
```

Where <pmsg#> is a value of 0-3 representing the periodic status message number and the <val> fields represent status configuration IDs or mnemonics.

Table 1-2. Periodic Status Message IDs

| Message                 | Mnemonic | Value |
|-------------------------|----------|-------|
| Message End Marker      | msg-end  | 0     |
| VOUT (bits 0:7)         | vout-b0  | 1     |
| VOUT (bits 8:15)        | vout-b1  | 2     |
| Bus Voltage (bits 0:7)  | vbus-b0  | 3     |
| Bus Voltage (bits 8:15) | vbus-b1  | 4     |
| Current (bits 0:7)      | curr-b0  | 5     |
| Current (bits 8:15)     | curr-b1  | 6     |
| Temperature (bits 0:7)  | temp-b0  | 7     |
| Temperature (bits 8:15) | temp-b1  | 8     |
| Position (bits 0:7)     | pos-b0   | 9     |
| Position (bits 8:15)    | pos-b1   | 10    |
| Position (bits 16-23)   | pos-b2   | 11    |
| Position (bits 24-31)   | pos-b3   | 12    |
| Speed (bits 0:7)        | spd-b0   | 13    |

Table 1-2. Periodic Status Message IDs (Continued)

| Message                  | Mnemonic    | Value |
|--------------------------|-------------|-------|
| Speed (bits 8:15)        | spd-b1      | 14    |
| Speed (bits 16:23)       | spd-b2      | 15    |
| Speed (bits 24:31)       | spd-b3      | 16    |
| Limit (no clear)         | lim-nclr    | 17    |
| Limit                    | lim-clr     | 18    |
| Faults                   | fault       | 19    |
| Faults (sticky)          | sfault-nclr | 20    |
| Faults (sticky clear)    | sfault-clr  | 21    |
| VOUT Voltage (bits 0:7)  | vout2-b0    | 22    |
| VOUT Voltage (bits 8:15) | vout2-b1    | 23    |
| Current Fault Count      | flt-curr    | 24    |
| Temperature Fault Count  | flt-temp    | 25    |
| VBUS Fault Count         | flt-vbus    | 26    |
| Gate Fault Count         | flt-gate    | 27    |
| COMM Fault Count         | flt-comm    | 28    |
| CANSTS (bits 0:7)        | cansts      | 29    |
| CANERR (bits 0:7)        | canerr-b0   | 30    |
| CANERR (bits 8:15)       | canerr-b1   | 31    |

## Firmware Update

Use the embedded bootloader application to update the firmware of your board by typing “update” at the command line.

### **Format:**

```
# update <file_name>
```

Where <file\_name> is the name of the binary file (\*.bin) that you would like to program to the board. Please note that if you program an invalid binary file, you may render the board inoperable. See the “Wait for Bootloader” section for updating a device with an incorrect image.

## Wait for Bootloader

Wait for the bootloader to request an update. Once the bootloader requests the update, the firmware update begins using the specified file. The MDL-BDC24 boot loader checks if the button is pressed on reset and issue a command to request a firmware update. If nothing responds to this request, the MDL-BDC24 continues to boot normally. The “boot” command is run to respond to this request and start an update automatically using the <file\_name> provided. This command should

be issued while holding down the button on the MDL-BDC24 that is being updated. Once the update starts, the button can be released and the firmware update continues normally. The “boot” command should only be used when the “update” cannot successfully update a controller and only works on MDL-BDC24 controllers.

***Format:***

```
# boot <file_name>
```

Where <file\_name> is the name of the binary file (\*.bin) that you would like to program to the board.



## IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

### Products

|                        |                                                                                      |
|------------------------|--------------------------------------------------------------------------------------|
| Audio                  | <a href="http://www.ti.com/audio">www.ti.com/audio</a>                               |
| Amplifiers             | <a href="http://amplifier.ti.com">amplifier.ti.com</a>                               |
| Data Converters        | <a href="http://dataconverter.ti.com">dataconverter.ti.com</a>                       |
| DLP® Products          | <a href="http://www.dlp.com">www.dlp.com</a>                                         |
| DSP                    | <a href="http://dsp.ti.com">dsp.ti.com</a>                                           |
| Clocks and Timers      | <a href="http://www.ti.com/clocks">www.ti.com/clocks</a>                             |
| Interface              | <a href="http://interface.ti.com">interface.ti.com</a>                               |
| Logic                  | <a href="http://logic.ti.com">logic.ti.com</a>                                       |
| Power Mgmt             | <a href="http://power.ti.com">power.ti.com</a>                                       |
| Microcontrollers       | <a href="http://microcontroller.ti.com">microcontroller.ti.com</a>                   |
| RFID                   | <a href="http://www.ti-rfid.com">www.ti-rfid.com</a>                                 |
| OMAP Mobile Processors | <a href="http://www.ti.com/omap">www.ti.com/omap</a>                                 |
| Wireless Connectivity  | <a href="http://www.ti.com/wirelessconnectivity">www.ti.com/wirelessconnectivity</a> |

### Applications

|                               |                                                                                          |
|-------------------------------|------------------------------------------------------------------------------------------|
| Automotive and Transportation | <a href="http://www.ti.com/automotive">www.ti.com/automotive</a>                         |
| Communications and Telecom    | <a href="http://www.ti.com/communications">www.ti.com/communications</a>                 |
| Computers and Peripherals     | <a href="http://www.ti.com/computers">www.ti.com/computers</a>                           |
| Consumer Electronics          | <a href="http://www.ti.com/consumer-apps">www.ti.com/consumer-apps</a>                   |
| Energy and Lighting           | <a href="http://www.ti.com/energy">www.ti.com/energy</a>                                 |
| Industrial                    | <a href="http://www.ti.com/industrial">www.ti.com/industrial</a>                         |
| Medical                       | <a href="http://www.ti.com/medical">www.ti.com/medical</a>                               |
| Security                      | <a href="http://www.ti.com/security">www.ti.com/security</a>                             |
| Space, Avionics and Defense   | <a href="http://www.ti.com/space-avionics-defense">www.ti.com/space-avionics-defense</a> |
| Video and Imaging             | <a href="http://www.ti.com/video">www.ti.com/video</a>                                   |

TI E2E Community Home Page

[e2e.ti.com](http://e2e.ti.com)

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2012, Texas Instruments Incorporated